

## Trail Chef Aluminum Cook Kit

### Parts List

Qty	Item
1	Cocoa Pot
1	Cocoa Pot Lid
1	2-Qt. Pot
1	2-Qt. Pot Lid
1	4-Qt. Pot
1	4-Qt. Pot Lid
1	8-Qt. Pot
1	Large Fry Pan / 8-Qt Pot Lid
1	Small Fry Pan
2	Fry Pan Handle
4	9-Inch Aluminum Plate
4	Plastic Cups
1	Red Nylon Cover



### Guidelines When Taking Home

1. Wash the kit thoroughly. Use warm water, detergent and scrub pads as necessary.
2. DO NOT use a dishwasher.
3. Wash the cover if necessary.
4. Make sure all parts are included with the kit.
5. Make sure all parts are part of the same kit. Parts will be marked with a color and a letter. (R- Red, Y – Yellow, G – Green, B – Blue or W – White)
6. List any problems on a piece of paper. Put the paper inside the nylon cover.  
Typical problems:
  - Broken pieces
  - Missing pieces
  - Parts belonging to another cook kit (i.e. wrong color code)
  - Extra pieces
  - Color coding has worn off

## Chef's Tool Kit

### Parts List

Qty	Item
1	Ladle
1	Spatula
1	Spoon
1	Fork
1	Slicing Knife
1	Paring Knife
1	Can Opener
1	Vegetable Peeler
1	Nylon Case



### Guidelines When Taking Home

1. Wash the kit thoroughly. Use warm water and detergent or put in the dishwasher.
2. Wash the cover if necessary.
3. Make sure all parts are included with the kit.
4. Make sure all parts are part of the same kit. Parts will be marked with a color (R- Red, Y – Yellow, G – Green, B – Blue or W – White)
5. List any problems on a piece of paper. Put the paper inside the nylon cover.  
Typical problems:
  - Broken pieces
  - Missing pieces
  - Parts belonging to another Chef's Tool Kit (i.e. wrong color code)
  - Extra pieces

## Stanley Traveling Camping Knife Set

### Parts List

Qty	Item
1	Large Chef's Knife
1	Meat Piercing Fork
1	Boning Knife
1	Paring Knife
1	Knife Sharpener
6	Steak Knives
1	Cutting Board (white)
1	Carry Case




### Guidelines When Taking Home

1. Wash the set thoroughly. Use warm water and detergent or put in the dishwasher.
2. Clean the case if necessary
3. Make sure all parts are included with the set.
4. Make sure all parts are part of the same set. Parts will be marked with a color and a letter (R- Red, Y – Yellow, G – Green, B – Blue or W – White). The color tends to come off easily, but each piece is also engraved with the first letter of the color.
5. List any problems on a piece of paper. Put the paper inside the case.  
Typical problems:
  - Broken pieces
  - Missing pieces
  - Parts belonging to another set (i.e. wrong color code)
  - Extra pieces

# Coleman Propane Stove

## ***Guidelines When Taking Home***

1. Make sure the following parts are included:
  - Stove
  - Grid
  - Drip tray
  - Propane hose
2. Clean the stove thoroughly. Use warm water, detergent, a degreasing cleaner such as Fantastik and scouring pads as necessary.
3. Be sure to clean the grid as well as the aluminum drip tray. If grease has spilled into the bottom of the stove, remove the drip tray using the wing nut to clean the interior of the stove.
4. Note any problems with the stove on a piece of paper. Include the paper with the stove when you return it.

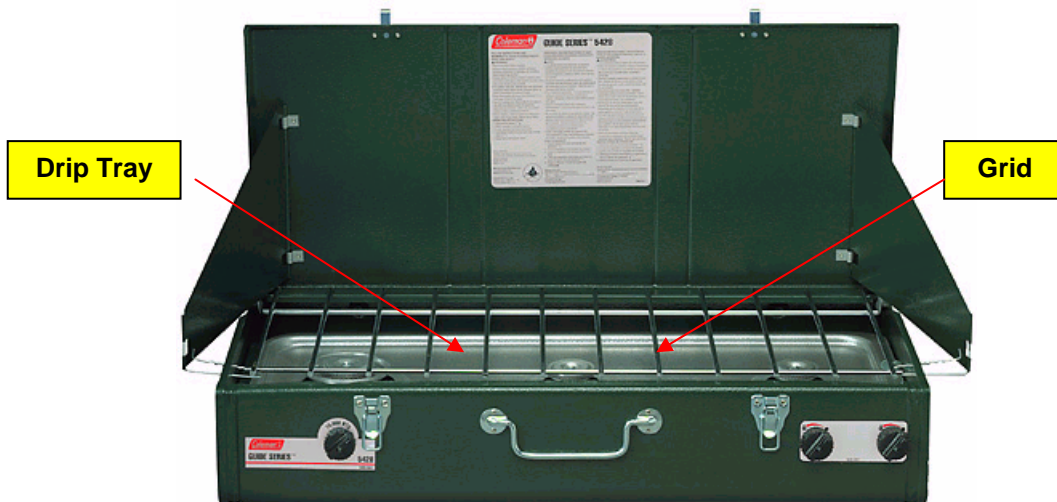

## Eureka Assault Outfitter Tent

### Parts List

Qty	Item
1	Tent body – marked with color and number
1	Fly – marked with color and number
3	Aluminum Poles – marked with color
1	Tent Bag – marked with color and number
1	Pole Bag – marked with color and number
1	Stake Bag – marked with color and number
6	Metal tent stakes
3	Yellow plastic tent stakes
4	Rope guy lines
1	Webbing buckled to rear fly door
1	Plastic ground sheet - Optional



### Guidelines When Taking Home

1. Dry the tent, fly, bags and ground sheet by hanging outside. Use a garage or basement if necessary.
2. Shake out and debris from the inside of the tent.
3. Air out the tent and fly even if it is not wet.
4. Make sure the poles are in good shape.
  - Any pieces missing?
  - Any pieces broken?
  - Are shock cords intact?
5. Make sure the all pieces are included. Don't forget to check for stakes and the webbing that is used to stake out the rear door vestibule. It is attached to both sides of the zipper with six sided release buckles.
6. Check for holes or rips in the tent or fly.
7. Check to make sure the tent zippers work.
8. Make sure the tent, fly, and all bags all have the same color and number. Colors are Yellow, Blue, Red, Green or White. Numbers are 1, 2 or 3.
9. Place the poles in the pole bag.
10. Place the guy lines and stakes in the stake bag.
11. Fold the tent in half with the fold crossing the two doors and the brown floor facing out. Fold the tent again so the width is somewhat less than the length of the tent bag.
12. Fold the fly so it is the same size or smaller than the folded tent. There is no right or wrong way to do this.
13. If there is a plastic ground sheet, fold this to be the same size as the folded tent.
14. Lay out the tent on the floor. Place the fly on top of the tent and the optional ground sheet on top of the fly.
15. Roll the pole and stake bags inside of the tent, fly and ground sheet and place in the tent bag.
16. Note any problems on a paper. Insert the paper in the top of the tent bag.